



Bluetooth Angle Sensor BlueAngle User Guide

⚠ Important Notes

- Turn off the device after use. It will **NOT** turn off automatically.
- Do **NOT** open the device. Opening causes permanent damage and voids the warranty.

Description

- ① **On/Off Button** – press to turn sensor on/off
- ② **Micro USB Port** – connect to USB cable to charge BlueAngle
- ③ **Status LED**
 - – BlueAngle is on
 - – BlueAngle is in charge
 - – BlueAngle is fully charged



Included in the box

- Bluetooth Angle Sensor BlueAngle 1X
- USB Charging Cable 1X
- USB Power Adapter 1X
- User Guide 1X

Compatible Software

- iPad: Runout

Quick Start

- Turn on **BOTH** BlueDial and BlueAngle.
- Launch Runout App, select either continuous mode or point mode.
- Tap Pair button to bring up a new pairing page.
- Wait for the app to finish scanning nearby devices, tap the name **BlueDialXXX** and **BlueAngleXXX**, then tap Connect button.
- Once paired, readings from both sensors will show on the main page.
- Tap Setting button to set up the sensor reading angle and the number of measuring points for one test in point mode.
To disconnect sensors, tap Unpair button.