

## Bluetooth Digital Indicator BlueDial User Guide

### ⚠ Important Notes

- Turn off the device (① and ⑥) after use. It will **NOT** turn off automatically.
- Do NOT open the device. Opening causes permanent damage and voids the warranty.
- BlueDial transmitter & digital indicator should be both on before pairing.
- BlueDial operates on two separate batteries:
  - 1) Rechargeable built-in Li-Po battery for the Bluetooth transmitter
  - 2) Coin SR44 or LR44 battery for the digital dial

### Description

- ① **Dial On/Off** – press to turn dial on/off
- ② **Origin Button** – press to zero dial reading. This can also be done in the app.
- ③ **Unit Button** – select reading in inch/mm
- ④ **SPC Output** – SPC data output port
- ⑤ **Dial Battery** – insert coin battery SR44 or LR44 for digital dial
- ⑥ **BLE On/Off** – press to turn Bluetooth transmitter on/off
- ⑦ **Status LED**
  - – Bluetooth transmitter is on
  - – BlueDial is in charge
  - – BlueDial is fully charged
- ⑧ **Micro USB Port** – connect to USB cable to charge BlueDial



### Included in the box

- BlueDial 1X
- Charging Cable(USB) 1X
- Power Adapter(USB) 1X
- User Guide 1X


### Compatible Software

- iOS: DialRead, DialReadPad, MultiGage Reader
- Android: Dial Reading
- Windows: Dial Reading (BLE Dongle Required)
- iOS App can be directly downloaded from the App Store for FREE.
- Android and Windows programs are available on Motionics website.


### Quick Start

- Insert SR44 or LR44 coin battery to dial indicator if it's first time use.

- Turn on **BOTH**

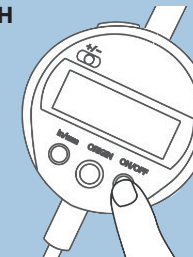

① Dial indicator

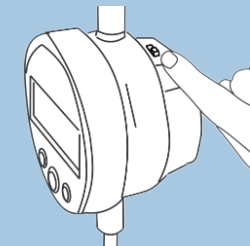

⑥ Bluetooth transmitter

- Plug in USB Bluetooth dongle if using Windows PC.
- Run the software, tap Pair button to enter pairing page.
- Wait for the software to finish scanning nearby devices, select BlueDialXXX to connect.
- Connection may take a few seconds, once paired, BlueDial reading shows in the software.