

⚠ Important Notes

- Turn off BlueDial (① and ⑥) and BlueAngle (⑨) after use. It will NOT turn off automatically.
- Do NOT open the device. Opening causes permanent damage and voids the warranty.
- BlueDial transmitter & digital indicator should be both on before pairing.
- BlueDial operates on two separate batteries:
 - 1) Rechargeable built-in Li-Po battery for the Bluetooth transmitter
 - 2) Coin SR44 or LR44 battery for the digital dial

Description

- ① **Dial On/Off** – press to turn dial on/off
- ② **Origin Button** – press to zero dial reading. This can also be done in the app
- ③ **Unit Button** – select reading in inch/mm
- ④ **SPC Output** – SPC data output port
- ⑤ **Dial Battery** – insert coin battery SR44 or LR44 for digital dial
- ⑥ **BLE On/Off** – press to turn Bluetooth transmitter on/off
- ⑦ **Status LED**
 - – Bluetooth transmitter is on
 - – BlueDial is in charge
 - – BlueDial is fully charged
- ⑧ **Micro USB Port** – connect to USB cable to charge BlueDial



- ⑨ **On/Off Button** – press to turn sensor on/off
- ⑩ **Micro USB Port** – connect to USB cable to charge BlueAngle
- ⑪ **Status LED**
 - – BlueAngle is on
 - – BlueAngle is in charge
 - – BlueAngle is fully charged

Included in the box


- BlueDial 1X
- Bluetooth Angle Sensor BlueAngle 1X
- Charging Cable(USB) 1X
- Power Adapter(USB) 1X
- User Guide 1X

Quick Start


1. Turn on both digital indicator and Bluetooth transmitter of BlueDial. Turn on BlueAngle. Pair gages in the App.



2. Attach BlueDial and BlueAngle to the testing shaft. Select the right angle on the Setting page. Enter the number of testing points.

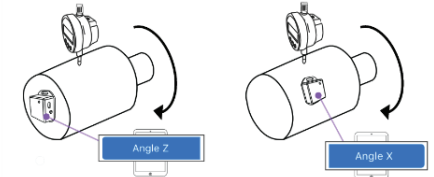

3. Start testing session. Rotate the shaft until all dash lines on the angle indicator become solid green lines.

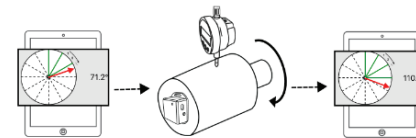

4. Move BlueDial to the next testing location, tap Add a plane button to start test for the next plane.

