





Important Notes

- Turn off the device after use. It will **NOT** turn off automatically.
- Do **NOT** open the device. Opening causes permanent damage and voids the warranty.
- BlueDial-LT transmitter & digital indicator should be both on before pairing.
- BlueDial-LT operates on two separate batteries:
 - 1) Rechargeable built-in Li-Po battery for the Bluetooth transmitter
 - 2) CR2032 battery for the digital dial
- The indicator face is not rotatable. Avoid rotating the dial face.

Description

- ① **Dial On/Off** – press to turn dial on/off
- ② **Origin Button** – press to zero dial reading; this can also be done in the App
- ③ **Unit Button** – select reading in inch/mm
- ④ **Zero/ABS Button** – change absolute/increment mode for the dial
- ⑤ **Preset Button** – preset dial data
- ⑥ **Tol Button** – make the dial work in tolerance mode
- ⑦ **Direction Button** – change measurement direction
- ⑧ **Dial Battery** – insert coin battery CR2032 for the digital dial
- ⑨ **BLE On/Off** – press to turn Bluetooth transmitter on/off
- ⑩ **Status LED**
 - – Bluetooth transmitter is on
 - – BlueDial-LT is in charge
 - – BlueDial-LT is fully charged
- ⑪ **Micro USB Port** – connect to USB cable to charge BlueDial-LT

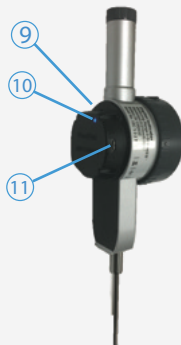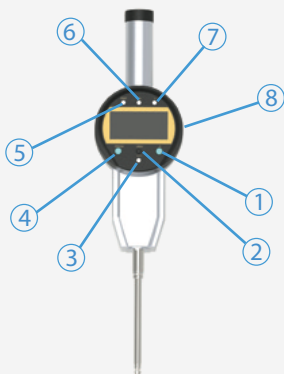

Included in the box

- BDLT-302 1X
- USB Charging Cable 1X
- USB Power Adapter 1X
- User Guide 1X

Compatible Software

- iOS: MultiGage Reader (download for FREE from the App Store)
- Android: MultiGage Reader (download for FREE from the Play Store)
- Windows: MultiGage Reader (BLE dongle required, download for FREE from www.motionics.com Go to Resources > Download > Software)



MultiGage Reader App
iPhone/iPad

MultiGage Reader APP
Android



Quick Start

- Insert CR2032 battery to dial indicator if it's a first time use.
- Turn on BOTH the dial indicator and the Bluetooth transmitter.
- Plug in USB Bluetooth dongle if using Windows PC.
- Run the software, tap Scan/+ button to enter pairing page.
- Wait for the software to finish scanning nearby devices, select **BlueDialLTXXX** to connect.
- Connection may take a few seconds, once paired, BlueDial-LT reading shows in the software.