

## ⚠ Important Notes

- Turn off the device (① and ⑤) after use. It will **NOT** turn off automatically.
- Do **NOT** open the device. Opening causes permanent damage and voids the warranty.
- BlueDial-LT transmitter & digital indicator should be both on before pairing.
- BlueDial-LT operates on two separate batteries:
  - 1) Rechargeable built-in Li-Po battery for the Bluetooth transmitter
  - 2) Coin SR44 or LR44 battery for the digital dial

## Description

- ① **Dial On/Off** – press to turn dial on/off
- ② **Origin Button** – press to zero dial reading; this can also be done in the App
- ③ **Unit Button** – select reading in inch/mm
- ④ **Dial Battery** – insert coin battery SR44 or LR44 for digital dial
- ⑤ **BLE On/Off** – press to turn Bluetooth transmitter on/off
- ⑥ **Status LED**
  - – Bluetooth transmitter is on
  - – BlueDial-LT is in charge
  - – BlueDial-LT is fully charged
- ⑦ **Micro USB Port** – connect to USB cable to charge BlueDial-LT



## Included in the box

- BlueDial-LT 1X
- USB Charging Cable 1X
- USB Power Adapter 1X
- User Guide 1X


## Compatible Software

- iOS: DialRead, DialReadPad, MultiGage Reader
- Android: DialReading
- Windows: Dial-Reading (BLE Dongle Required)
- iOS App can be directly downloaded from the App Store for FREE.
- Android App can be directly downloaded from the Google Play Store for FREE.
- Windows software is available on Motionics website.

## Quick Start

- Insert SR44 or LR44 coin battery to dial indicator if it's first time use.

- Turn on **BOTH**

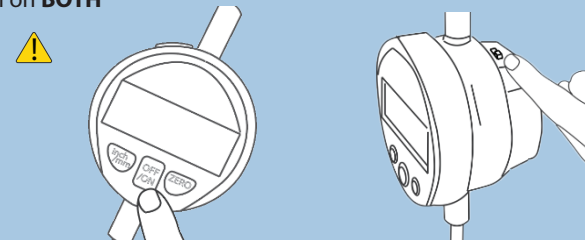

① Dial indicator

⑤ Bluetooth transmitter

- Plug in USB Bluetooth dongle if using Windows PC.
- Run the software, tap Pair button to enter pairing page.
- Wait for the software to finish scanning nearby devices, select **BlueDialLTXXX** to connect.
- Connection may take a few seconds, once paired, BlueDial-LT reading shows in the software.