


⚠ Important Notes

- You need a Motionics wireless crankshaft deflection kit and USB dongle BLED112 to use this software.
- More detailed instructions can be found in the **Help** tab in the software.

Interface

- 1 **Dashboard** – View crankshaft gages in real time and conduct tests
- 2 **Gages** – Add dongles and connect wireless gages
- 3 **Measurements** – View saved measurements in this tab
- 4 **Settings** – Control test/gage settings
- 5 **Help** – Find detailed instructions for operating the software
- 6 **About** – More information about Motionics and our products
- 7 **Web Panel** – Assign gages to webs to conduct tests
- 8 **Test Configuration** – Edit test configuration settings
- 9 **Save Test** – Save readings to database

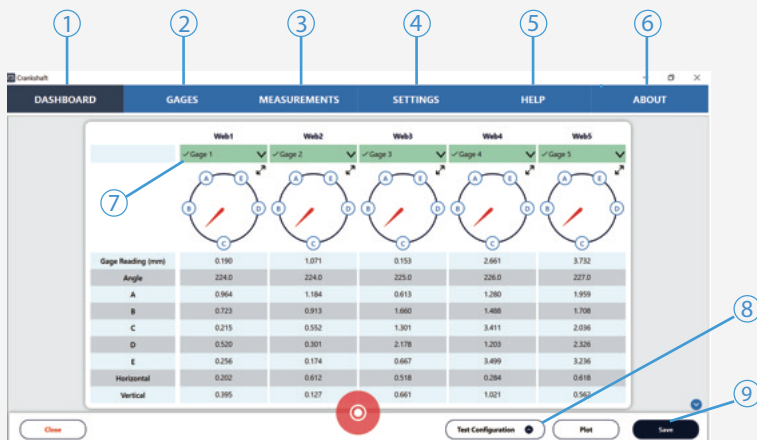

Download

- Download the software from <http://www.motionics.com/downloads.html>
- Download USB Dongle driver, if it is not automatically installed, at: <http://www.motionics.com/downloads/BLED112-Signed-Win-Drv.zip>

Installation

- Run the setup.exe file to install the software.
- Connect the USB dongle to one of the USB ports of the PC.
- For a first time use, wait for Windows to search and install the required driver.
- If the driver is automatically installed, no further steps are needed.
- If the driver is not automatically installed, use the link above to manually download the driver zip file, then unzip it.
- Go to **Control Panel - System and Security - System - Device Manager**. In **Device Manager**, find the Bluetooth low energy dongle, right click, select **Update Driver Software**.
- Select **Browse my computer for driver software**, select the path where the driver downloaded in previous step is stored, then click **Next**. If there is any prompted window appearing, just allow it to install the driver.

Quick Start

- Connect the USB dongle, turn on your wireless crankshaft gage (dial and transmitter) and run the software.
- Go to the **Gages** tab and click the + button next to **Dongles**. Select a dongle from the list and press **Select**. Each dongle can connect to up to 8 devices, and you can add more dongles to connect to more devices.
- Press the **Scan** button to begin searching for nearby devices.
- Select devices from the pop-up window and press **Connect**.
- Once connected, each device will be added to the **Gages** list alongside its name, reading, battery level, and signal strength.
- Go to the dashboard and click **New Test**.
- Enter the engine configuration information in the **Test Configuration** window. If you need to change the configuration settings, you can press the button on the bottom of the screen (8).
- Click the dropdown menu on each web panel to assign a gage to each web. Live readings will then display on the panel.
- Go to the **Settings** tab to choose continuous or single capture mode.
- If you're in continuous mode, press the record button to begin the test. Readings will be taken automatically at each test point. and the test will stop once each test point has been reached.
- If you're in single capture mode, press the capture button under each web column to capture a reading when the indicator needle is on a test point (the point will change color once reached).
- Press the **Save** button to save readings according to plant and engine.
- To access previously saved readings, go to the **Measurements** tab.
- To add an engine configuration, go to the **Settings** tab, click **Engine Configurations**, and press the + button. You can click on an existing configuration to edit it.
- For more instructions, please go to the **Help** tab.