



Wireless Trigger Switch WiMER Trigger User Guide

⚠ Important Notes

- Turn off the device after use. It will **NOT** turn off automatically.
- Do **NOT** open the device. Opening causes permanent damage and voids the warranty.

Description

- ① **Tri-Color LED**
 - – Device is on
 - – Device is in charge
 - – Device is fully charged
- ② **USB Port** – connects to USB cable to charge
- ③ **On/Off Button** – push on and push off
- ④ **Trigger Connector** – 2.5 mm audio port, connects to trigger switch



Included in the box

- WiMER Trigger 1X
- Trigger Switch 1X
- USB Charging Cable 1X
- USB Power Adapter 1X
- User Guide 1X

Quick Start

- Turn on WiMER Trigger device and plug in the push switch.
- In Windows *Settings* on computer, select *Devices*.
- Press + *Add Bluetooth or other device* button and select *Bluetooth*.
- Click WiMER_Trigger from the list and the connection starts.
- Once the WiMER Trigger device is connected, every time the push switch is pressed, one F9 command is sent to the computer.
- After the first connection, the WiMER Trigger device will automatically connect to the same computer every time it turns on.
- To connect to a different computer, click WiMER_Trigger from the list in *Bluetooth & other devices* in computer *Settings* and press *Remove device*.
- If other devices are not able to find WiMER_Trigger, press and hold the push switch for 10s to reset WiMER_Trigger.