




## Important Notes

- Turn off the device after use. It will **NOT** turn off automatically.
- Do **NOT** open the device. Opening causes permanent damage and voids the warranty.

## Description

- ① **Eyelet** - pull out the string for measurement
- ② **BLE On/Off Button** - Press to turn transmitter on/off
- ③ **Micro USB Port** - connect to the USB cable to charge BluePot
- ④ **Tri Color LED**
  - - Device is on
  - - Device is in charge
  - - Device is fully charged

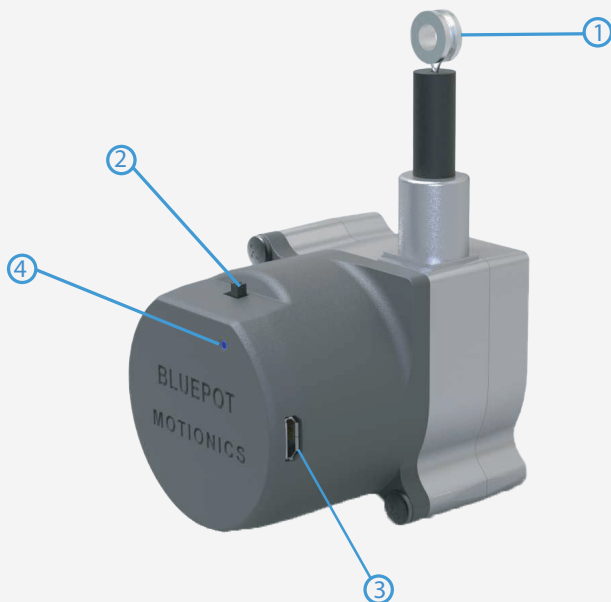

## Included in the box

- BluePot 1X
- USB Charging Cable 1X
- USB Power Adapter 1X
- User Guide 1X

## Compatible Software

- iOS: MultiGage Reader (download for FREE from the App Store)
- Android: MultiGage Reader (download for FREE from the Play Store)
- Windows: MultiGage Reader (BLE dongle required, download for FREE from [www.motionics.com](http://www.motionics.com) Go to Resources > Download > Software)



MultiGage Reader App  
iPhone/iPad

MultiGage Reader APP  
Android



## Quick Start

- Turn on BluePot.
- Plug in the USB Bluetooth dongle if you are using Windows PC.
- Run the software, tap Scan/+ button to enter pairing page.
- Wait for the software to finish scanning nearby devices; select BluePotXXXX to connect.
- Connection may take a few seconds, once paired, BluePot readings show in the software.